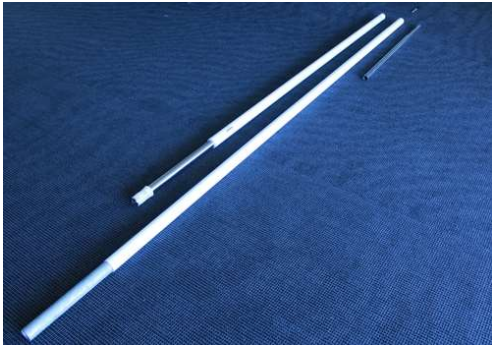



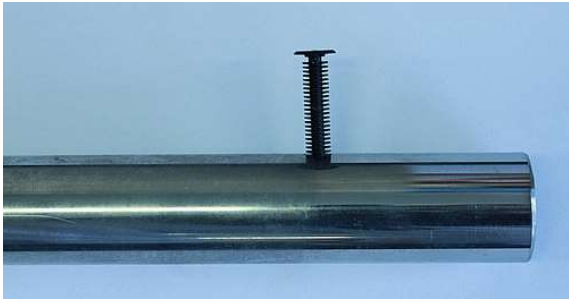


Supreme Swing Arm Assembly Instructions

 A photograph showing the components of the swing arm assembly: a long white pole, a shorter white pole with a bearing at one end, and a small metal ground mount.	<p>Supplied with</p> <ol style="list-style-type: none">1. Ground Mount x 12. Bottom pole x 13. Top pole with bearing x14. Banner arm x15. Top arm bolt x16. Plastic 'Xmas' trees x27. <p>Note: Ground mount is inserted in the bottom pole when delivered</p>
 A close-up photograph showing the bearing end of the top pole being inserted into the bottom pole.	<ol style="list-style-type: none">1. Remove ground mount from bottom pole2. Insert bearing end of the top pole into the bottom pole
 A photograph showing the two poles fully assembled together, with the bearing end of the top pole seated inside the bottom pole.	<p>The bearing fit should be snug and rotate freely.</p>

 A close-up photograph showing a white cylindrical banner arm being inserted into a hole in a silver metal pole. A bolt is visible on the pole, and a lock nut is being inserted into the banner arm.	<ol style="list-style-type: none">1. Insert banner arm through hole in top pole.2. Insert bolt and tighten with supplied lock nut.
 A photograph of a silver metal pole with a black plastic clip attached to its top. The clip has a serrated edge and a small protrusion.	<p>'Xmas' trees plastic clips are used for securing banner to top arm.</p>

See separate information sheet for installation instructions.

Queries. Please contact us on 0800 900800 for assistance.